


EVC-S クイック・マニュアル

ELECTRONIC VALVE CONTROLLER typeS

最初にEVC-S本体のON⇄OFFの確認をしましょう

- ① スイッチ真ん中「長押し」でON⇄OFF



☆ブーストアップをしてみよう!!

★まずは目標とするブースト圧に近づけましょう

より細かく
設定するには

- ① スイッチを「左長押し」でブースト設定モードへ

オフセット値設定 (OFSが表示されます)
ここで大きな数字を入力するとブースト圧が上がります



初期値が10%に入力されております。
0~100%の範囲で調整可能です。

- ① スイッチ上を押すと数字が大きくなります(ブースト大)
- ② スイッチ下を押すと数字が小さくなります(ブースト小)



- ③ 数値を決めたら「左長押し」で決定!

まずはココまでで目標のブースト圧になる様に調整してみましょう。
安全の為、まずは小さい数値から設定をしていきましょう。

※上記はAモードでの設定ですがBモードで設定するときは、右or左「短押し」でBモードに切替後、上記同様に設定ください

ブースト制御モード



.....どちらか動作しているモードを表示

- ① ② 右・左短押しでA/Bモードの切り替えを行います。

☆ブーストが上がったことを確認したら...


ブースト設定モードでオフセット値以外の設定を使ってみよう!!

(より細かい設定ができます)

- ① 「右短押し」でレスポンス値設定 (RSPが表示されます)




- ② 上下ボタンにてレスポンス値を設定

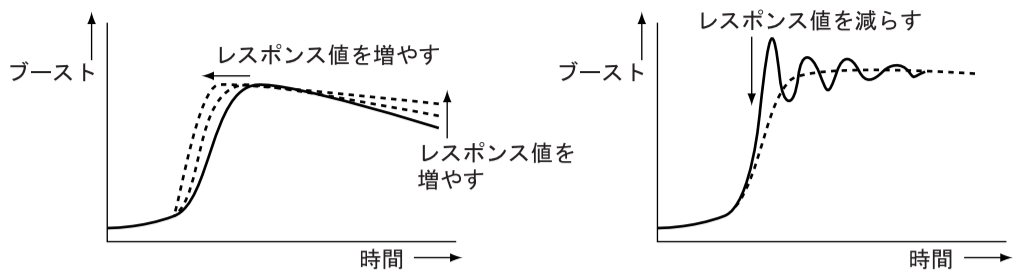

- ② 「右短押し」でオーバーブースト値設定 (OPTが表示されます)



- ③ 上下ボタンにてオーバーブースト値を設定

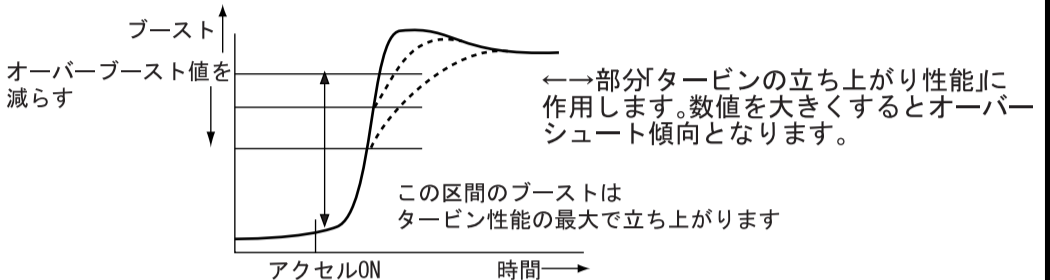

- ③ 「右短押し」でワーニング値設定 (WRNが表示されます)



- ④ 上下ボタンにてワーニング値を設定

※目標のブースト圧より少し大きい数値を初期に入力しておきましょう

- ③ 「右短押し」でドロップ値設定 (DROが表示されます)



- ⑤ 上下ボタンにてドロップ値を設定

- ④ 「右短押し」でオフセット値設定に戻ります。


- ③ 数値を決めたら「左長押し」で決定!

EVC-S Quick Manual

ELECTRONIC VALVE CONTROLLER typeS

Turn on the EVC-S.

- ① To turn on(or off) the EVC-S, press the center of the switch longer than a second.



★To achieve the target boost setting.

For more accurate setting:

- ① Press the left side of the switch longer than a second to go to the Boost Control Mode.

Off Set Value ("OFS" appears on the monitor.)
Entering a larger number increases the boost pressure.



Default Setting: 10%
Adjust the setting between 0 - 100%.

- ① Press the upper side of the switch to increase the number and increase the boost pressure.
- ② Press the lower side of the switch to decrease the number and decrease the boost pressure.



- ③ Once the target boost setting is entered, press the left side of the switch longer than a second.

Adjust the number until the target boost is achieved following the procedure above. For safety, start off with a small number.

※Before setting the target boost pressure, select the A Mode or B Mode by pressing the right or left side of the switch.

Boost Control Mode




.....Selected mode "A" or "B" is shown.

- ① ② To switch the mode, press the right or left side of the switch.

- ① Press the right side of the switch to set the Response Value. ("RSP" appears on the monitor.)




- ② Press the upper or lower side of the switch to enter a number.

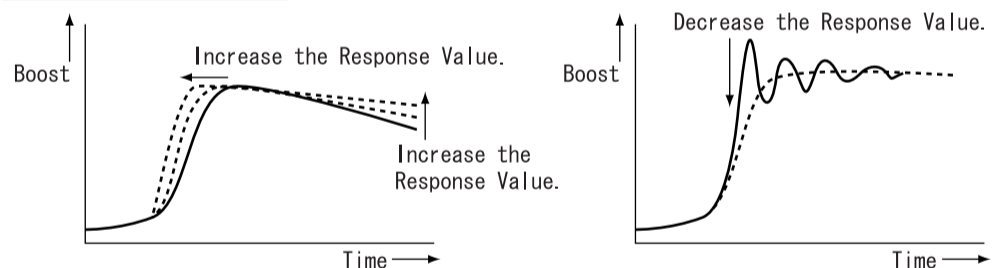

- ② Press the right side of the switch to set the Over Boost Value. ("OPT" appears on the monitor.)



- ③ Press the upper or lower side of the switch to enter a number.

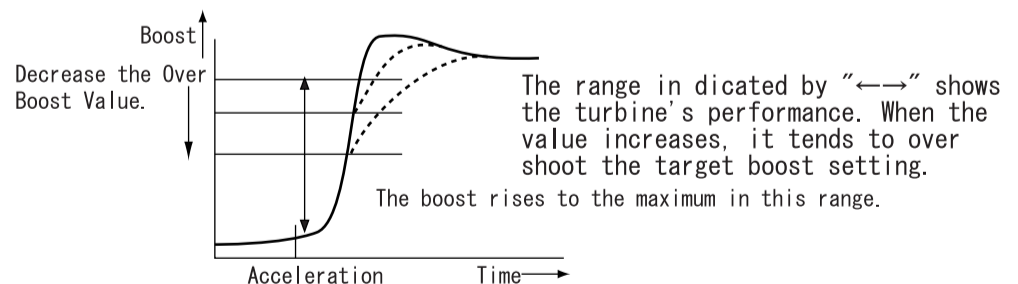

- ③ Press the right side of the switch to set the Warning Value. ("WRN" appears on the monitor.)



- ④ Press the upper or lower side of the switch to enter a number.

※Enter a slightly larger number than the target boost value.

- ③ Press the right side of the switch to set the Drop Value. ("DRO" appears on the monitor.)



- ⑤ Press the upper or lower side of the switch to enter a number.

- ④ Press the right side of the switch to return to the Offset Value.

- ③ Press the left side of the switch longer than a second to determine the setting. The boost pressure appears on the monitor.