




Instructions for Installing Banzai Racing FD Street Polyurethane Motor Mounts



Please read carefully before attempting to install product

These instructions are for installing mounts on 2 steel engine brackets when removed from vehicle.

1. Remove hardware & isolators from motor mounts. Hardware will be re-installed in this configuration.
2. Place mounts on steel brackets.
3. Place flat & lock washers on bolt-head and thread through bracket and mount.
4. Attach brackets to bottom of engine.
5. Lower engine slowly, aligning motor mounts with crossmember mounting holes.
6. Install isolators & larger flat washer.
7. Twin Turbo applications must thread bolt from bottom as in Pics #2 & #3
8. Thread locknut onto end of bolt and tighten securely with wrench (pic #3). Compress smaller isolator to width of washer. **PLEASE NOTE: DO NOT OVER COMPRESS**
9. Note, Bolt can be installed in reverse if necessary with lock nut on top, but small isolators must be below sub-frame

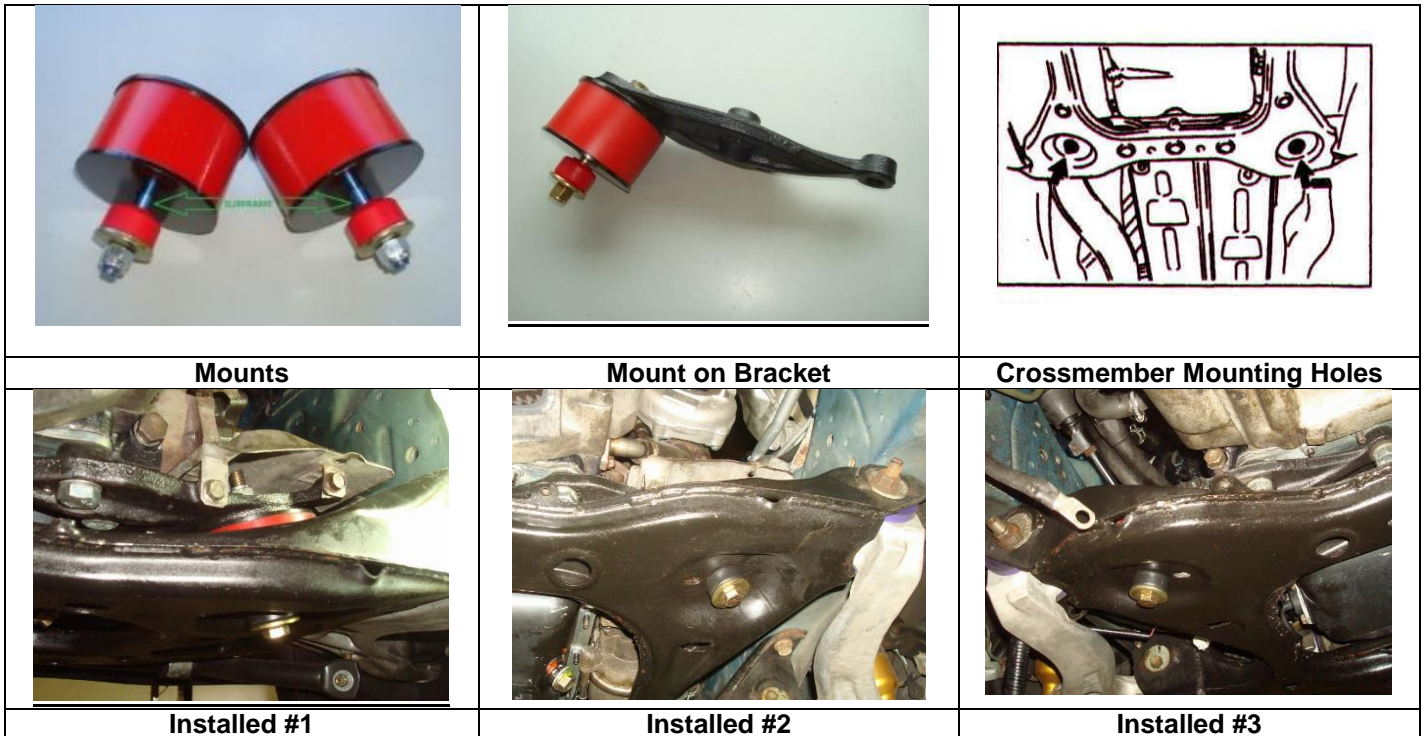

List of parts in Banzai Racing FD Polyurethane Motor Mount kit:

- 4" Grade-8 3/8" Bolt (x2)
- Polyurethane Isolator & Washer (x2)
- 3/8" Grade-8 Lock Washer (x2)
- 3/8" Grade-8 Flat Washer (x4)
- 3/8" Grade-8 Nylon Insert Locknut (x2)
- Polyurethane Motor Mount (x2)

If you have any questions or concerns regarding installation of these motor mounts, please contact us via email: tech@banzai-racing.com or by phone: (574) 594-2035

Banzai Racing Inc. is not liable for any damage or injury due to installation of this product